
Overview

WARNINGS

- This product must be installed in accordance with all applicable codes by a person familiar with the product.
- Each fixture must be **properly supported** during install.
- **DO NOT** join fixtures on the floor prior to lifting, or damage will occur.
- **Before beginning installation**, review our complete list of warnings by visiting www.saylite.com/warnings.

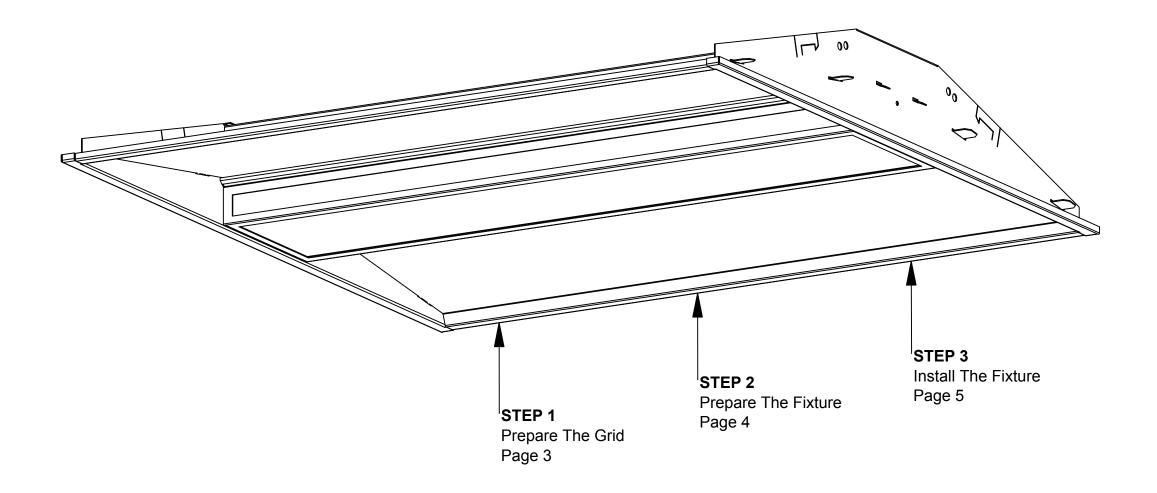



We believe in the power of light.



1 of 5

Preparation - Tools/Parts Identification

A. Identify Fixtures




Texas Fluorescents Reinvented

Saylite **LED**

PART# CBF14LVXXWXXXXLDMVXXK

VOLTAGE: 120-277, 50/60HZ WATTAGE: XX MAX FLUX: XXXX LUMENS

CCT: XXXX DATE CODE: XX/XX/XX TYPE: XX

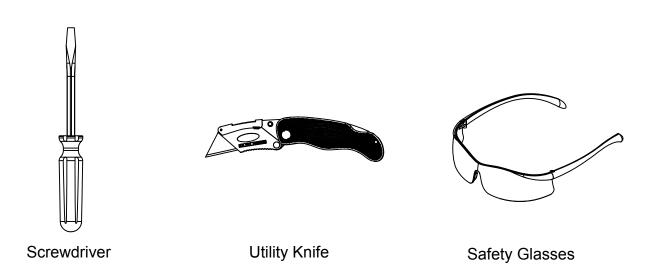


- Use labels found on the box and inside fixture bodies to identify bodies.
 NOTE: Locations of labels can vary.


- Remove all fixtures from their boxes.
 Organize fixtures based on their labels at the install location.

- Always use proper safety equipment when installing fixtures.
 Tools shown are recommended for standard install. Tools needed may vary based on actual install location conditions.

C. Identify Parts

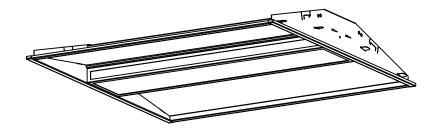

CBF,SBC-Recessed Grid Fixture (Provided)

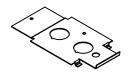

Access Plate PN: 1TTACCESSPLATE

B. Tools Needed




Wire Strain Relief PN: HEYCO 1210

- Read entire install instructions before beginning installation.
 Unpack all components and arrange in order of install steps.
 For help with installation, please contact us at www.saylite.com
- or call us at (972) 247-3171.

Step 1 - Prepare The Grid

A. Transfer Measurements

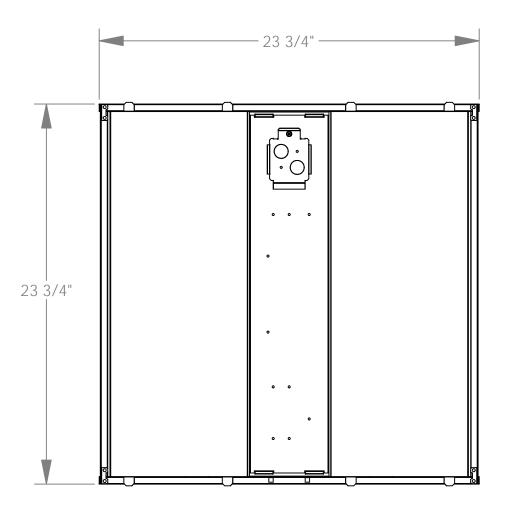


Note: 2X2 fixture shown, your fixture may vary.

- Note the length and width dimensions of the fixture, including the pre-installed flange.
- Transfer the dimensions to the grid. Set the grid rails to the proper width.

B. Cut Ceiling Panels



Texas Fluorescents Reinvented

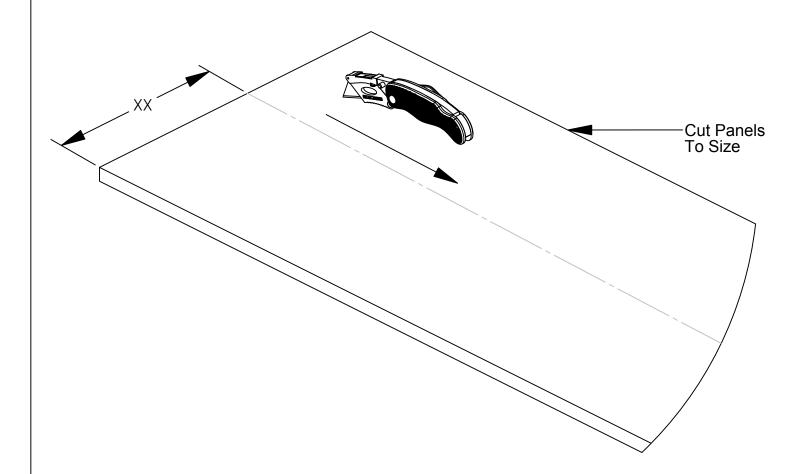


• Optional: Cut ceiling panels to fit the custom fixture-spaced grid.

Items Used In This Step



Step 2 - Prepare The Fixture

B. Remove 7/8" Knockout

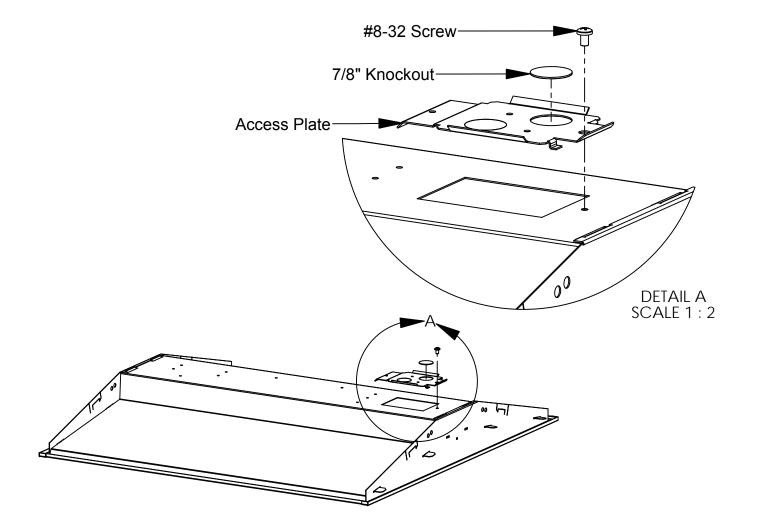


- Remove the access plate by removing the #8-32 screw as shown. Set aside.
- Remove the 7/8" knockout from the desired location using a flat tip screwdriver as shown above.

B. Install Power Cord




Texas Fluorescents Reinvented

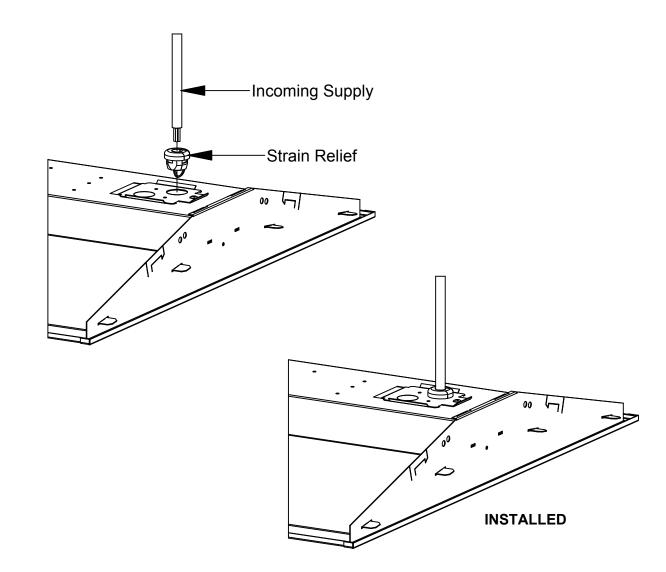


- Wire the incoming supply to the fixture in accordance with all local, state and national codes.
- Install using a 7/8" strain relief as shown above. Reinstall the screw removed in the previous step.

Items Used In This Step

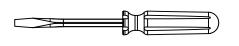


Screwdriver

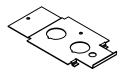

Access Plate



Strain Relief

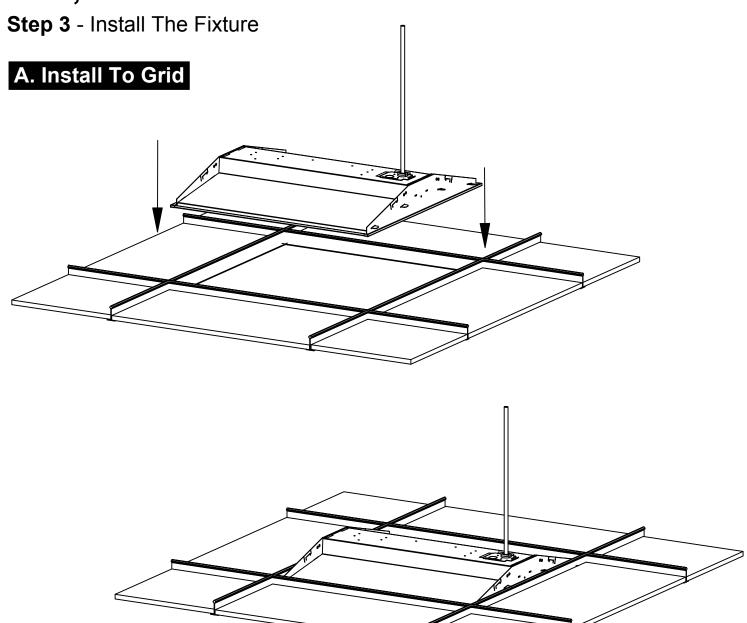


INSTALLED


• Ensure the fixture is flush in the grid, that all edges make contact with the grid, and is secure.







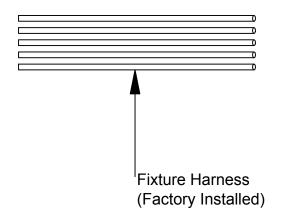

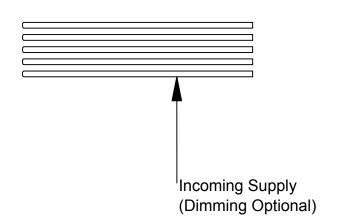

WIRING LEGEND		
Black	Hot	Line Voltage
White	Neutral	Line Voltage
Green	Ground	
Gray	Dimming	0-10V DC
Violet	Dimming	0-10V DC

- Wire the fixture to the incoming supply. Refer to the wiring legend above as needed.
- Note: Use UL approved connectors only. Follow all local, state and national codes.
- Install is now complete.

Items Used In This Step

• Lay the fixture in to the grid face down as shown above.