
WARNINGS

- This product must be installed in accordance with all applicable codes by a person familiar with the product.
- Each fixture must be **properly supported** during install.
- **DO NOT** join fixtures on the floor prior to lifting, or damage will occur.
- **Before beginning installation**, review our complete list of warnings by visiting www.saylite.com/warnings.



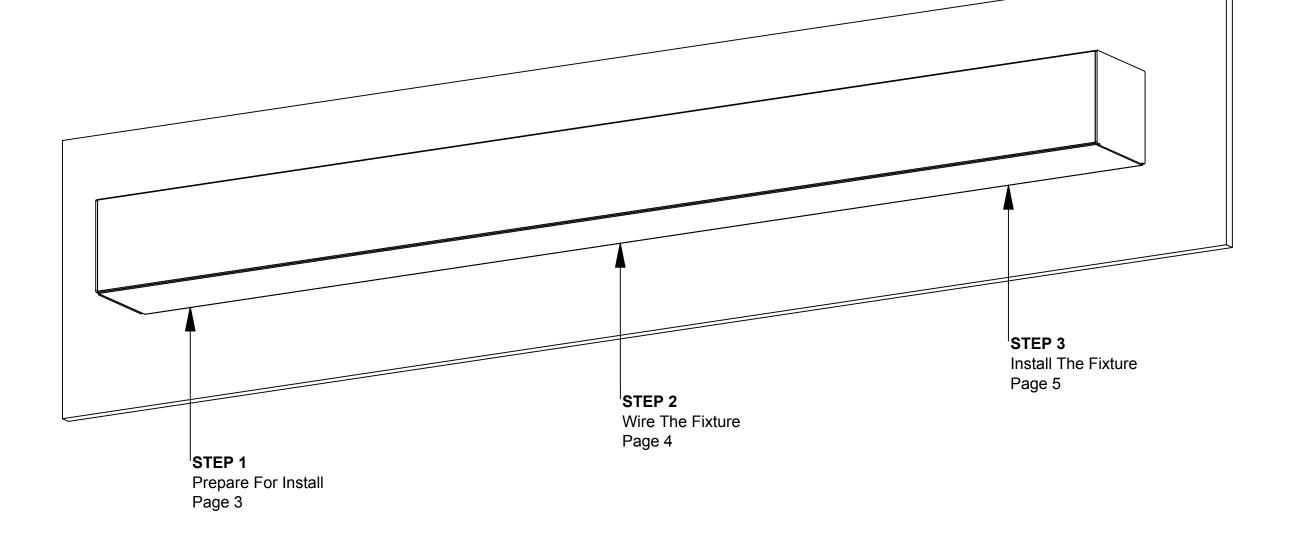

We believe in the power of light.



Preparation - Tools/Parts Identification


A. Identify Fixtures

Saylite **LED** PART# 44WSFXXLTXXWXXXXLDMVXXKWH VOLTAGE: 120-277, 50/60HZ CCT: XXXX WATTAGE: XX MAX DATE CODE: XX/XX/XX FLUX: XXXX LUMENS TYPE: XX

- Use labels found on the box and inside fixture bodies to identify bodies.
 NOTE: Locations of labels can vary.


- Remove all fixtures from their boxes.
 Organize fixtures based on their labels at the install location.

B. Tools Needed







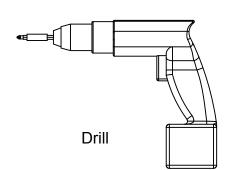



Texas Fluorescents Reinvented

Safety Glasses

- Always use proper safety equipment when installing fixtures.
 Tools shown are recommended for standard install. Tools needed may vary based on actual install location conditions.

C. Identify Parts



44/66 Wall Mount Fixture (Provided)



Mounting Screw W/ Anchor (By Others)


- Read entire install instructions before beginning installation.
 Unpack all components and arrange in order of install steps.
 For help with installation, please contact us at www.saylite.com
- or call us at (972) 247-3171.

Step 1 - Prepare For Install


Saylite


Texas Fluorescents Reinvented

A. Remove The Lens & Gear Tray

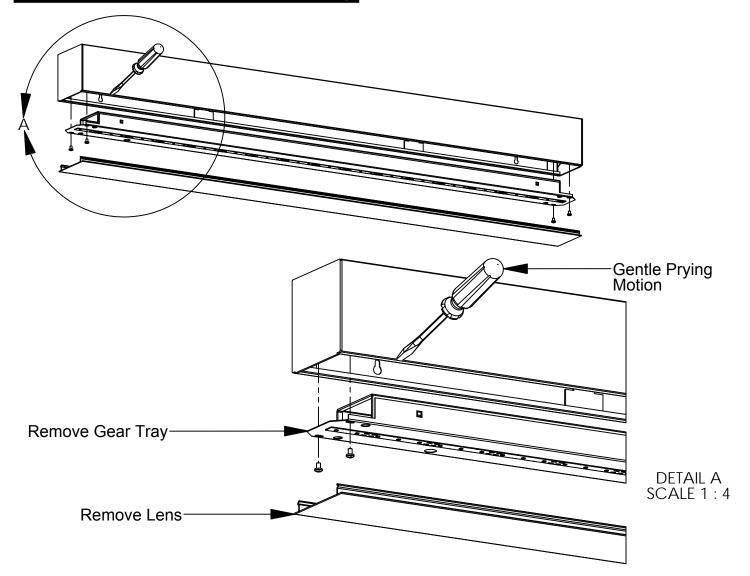

B. Remove 7/8" Knockout

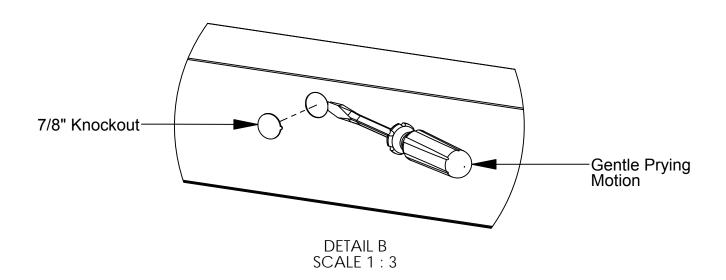


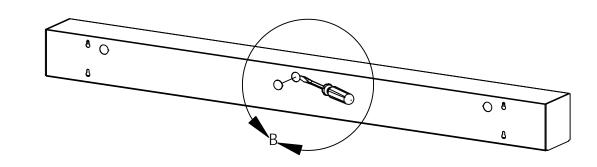

- Carefully insert a flat tip screwdriver, and use a gentle prying motion to remove lenses.
- Remove the gear tray as shown. Set the lens and gear tray aside in a safe location.

• Using a gentle, prying motion, remove the 7/8" knock out from the desired location..

Items Used In This Step




Flat Tip Screwdriver

Step 2 - Wire The Fixture


Saylite

Texas Fluorescents Reinvented

A. Drill Hole For Wiring

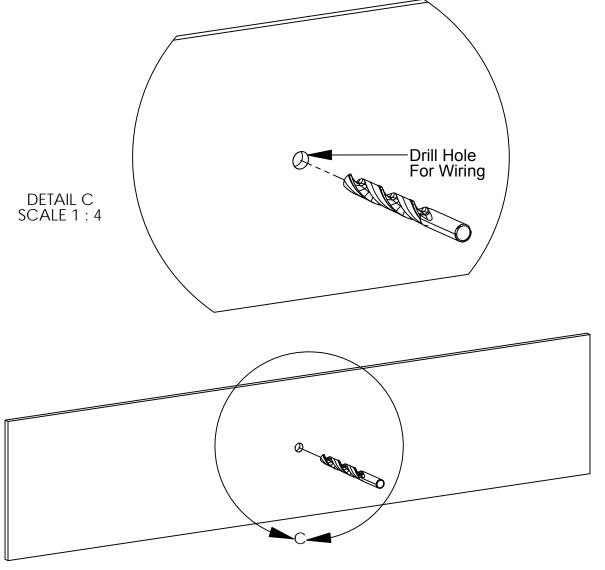

B. Connect The Wiring

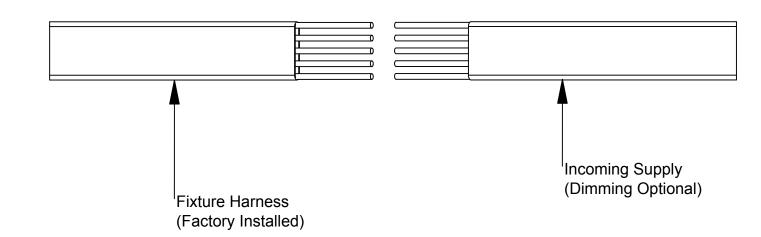

WIRING LEGEND		
Black	Hot	Line Voltage
White	Neutral	Line Voltage
Green	Ground	
Gray	Dimming	0-10V DC
Violet	Dimming	0-10V DC


- Using a 3/4" bit, drill a hole to allow supply wiring to pass thru.
- Note: Use caution when drilling as to not damage components inside of wall.

- Wire the fixture to the incoming supply. Refer to the wiring legend above as needed.
- Note: Use UL approved connectors only. Follow all local, state and national codes

Items Used In This Step




3/4" Drill Bit

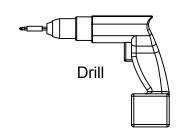

Step 3 - Install The Fixture



Texas Fluorescents Reinvented

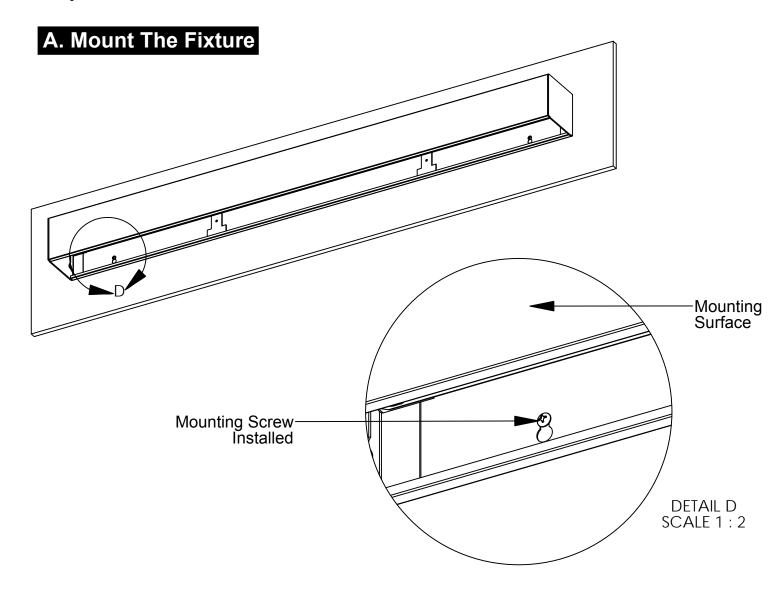



B. Replace Components Install Gear Tray Install Lens Install Complete • Install the gear tray back in to the fixture as shown above.

- Press the fixture firmly to the wall.
- Secure the body to the mounting surface using anchored mounting screws (by others).

- Reinstall the lens by lining up with the fixture and gently press, causing the lens to snap in.
- · Install is now complete.

Items Used In This Step

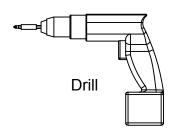



Mounting Screw W/ Anchor (By Others)