

CEN (改圖):	ISSUE (版本):	ZONE (位置):	REVISIONS (修改次數):	CHK (審核):	DATE (日期):	APPD (批准):	DATE (日期):

## LED CANOPY

## Installation Guide




**PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION**

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -40° C to 40° C and to be horizontally mounted with the LEDs facing down.
- This product is not available for special service environments, such as places with corrosive gas liquids or high pressure water vapor


## Installation

1. Pendent with 3/4 inch Condu


1. Loosen the screw on side of the light, removing the bracket from Canopy light by pulling it slightly out, leaving the ring on bracket. ( See the Step 1 above)

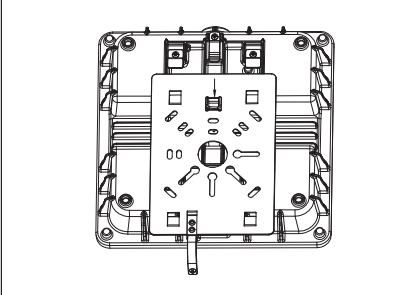

2. Connect the wires threaded from conduit and Canopy, Black wire for Line, White for Neutral, Green/Yellow Green for Ground

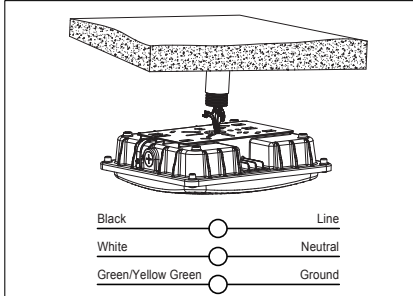


3. Screw the Conduit into the hole on top of Canopy light  
Installation done.

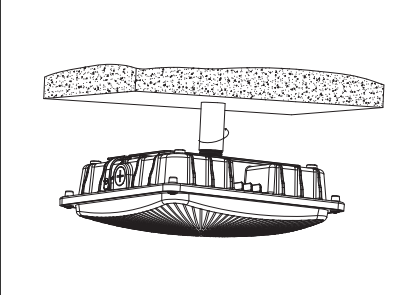


## 2. Surface mould


1. Remove the lens and metal plate unscrewing the screws.

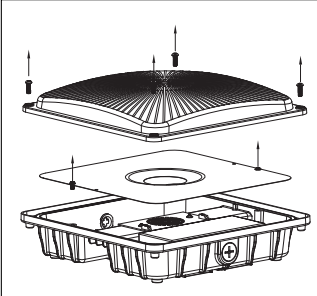


2. Cut off the wires through from 3/4" hole and plug the hole with provided Plug.  
Drill 4 holes on edge of fixture and fix it on the ceiling with using appropriate screws.

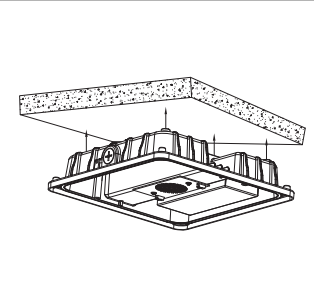


3. Remove 1/2" plug from direction you intend to feed conduit.

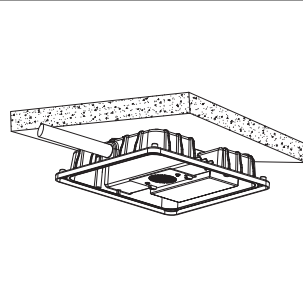

4. Disconnect the wires came from 3/4" hole and connect the wires came from 1/2" conduit with canopy . (White for Neutral, Black for Line, Green/Yellow Green for Ground)

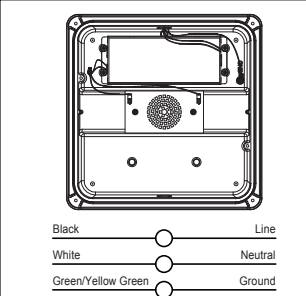


5. Replace the metal plate and the lens, make sure no wires are pinched when replacing plate.

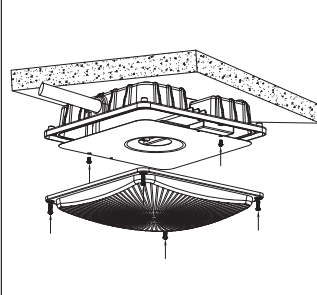

## WIRING DIAGRAM

For 0-10V dimming version, please check wiring diagram below

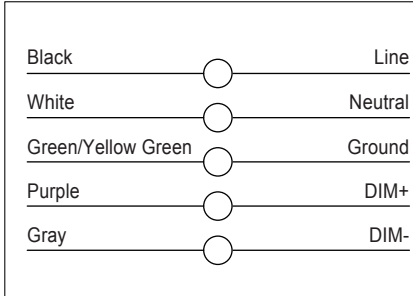

设计： 卢昭燕

审核:

质量:

标准化:

批准: