
Overview

WARNINGS

- This product must be installed in accordance with all applicable codes by a person familiar with the product.
- Each luminaire must be properly supported during install.
- **DO NOT** join fixtures on the floor prior to lifting, or damage will occur.
- **Before beginning installation**, review our complete list of warnings by visiting www.saylite.com/warnings.

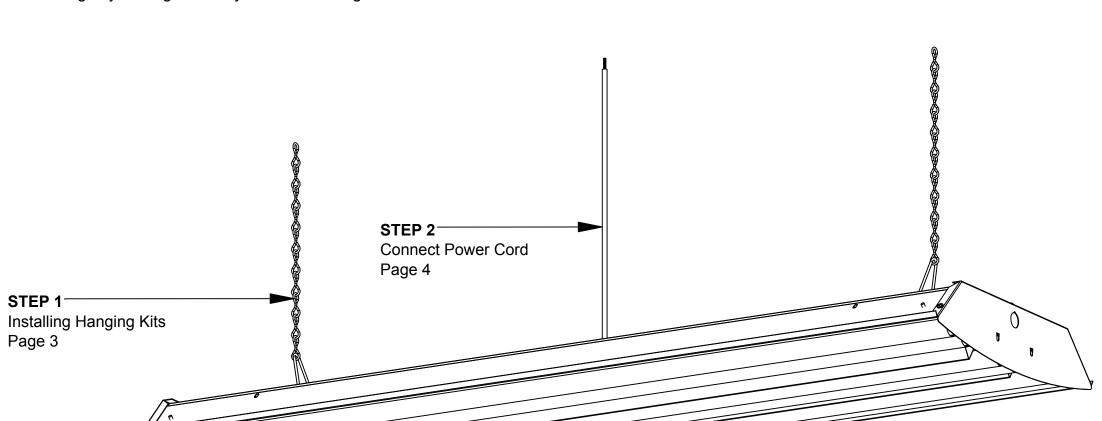

We believe in the power of light.



Texas Fluorescents Reinvented

Preparation - Tools/Parts Identification

A. Identify Fixtures

B. Tools Needed







PART# HBC6LXXLTXXWXXXXLDMVXXKWH

VOLTAGE: 120-277, 50/60HZ WATTAGE: XX MAX FLUX: XXXX LUMENS

DATE CODE: XX/XX/XX

TYPE: XX



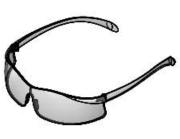


Safety Glasses

- Use labels found on the box and inside fixture bodies to identify bodies.
 NOTE: Locations of labels can vary.

- Remove all fixtures from their boxes.
 Organize fixtures based on their labels at the install location.

- Always use proper safety equipment when installing fixtures.
 Tools shown are recommended for standard install. Tools needed may vary based on actual install location conditions.


C. Identify Parts

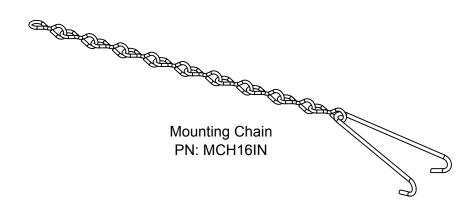


- Read entire install instructions before beginning installation.
 Unpack all components and arrange in order of install steps.
 For help with installation, please contact us at www.saylite.com or call us at (972) 247-3171.

Step 1 - Mount The Fixture

A. Prepare The Fixture

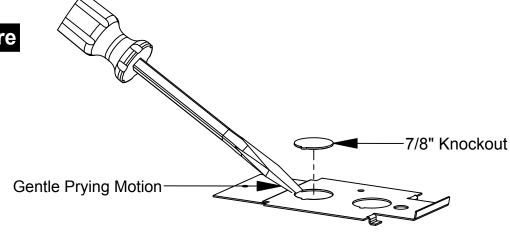

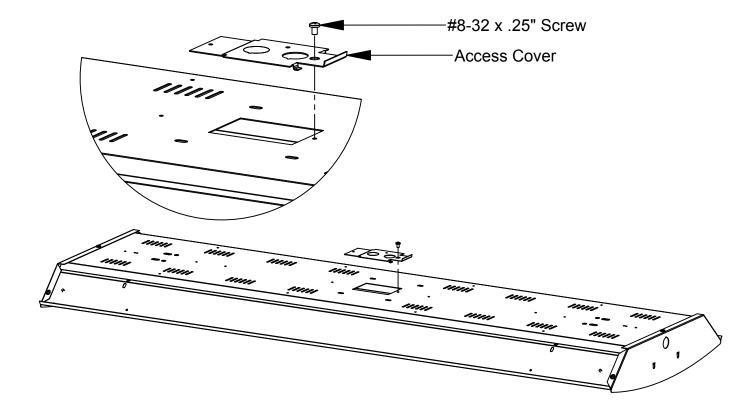


- Remove the access cover by removing (1) #8-32 x .25" screw as shown above.
- Remove the 7/8" knockout by using a gentle prying motion with the flat tip screwdriver as shown.




B. Install Mounting Chains




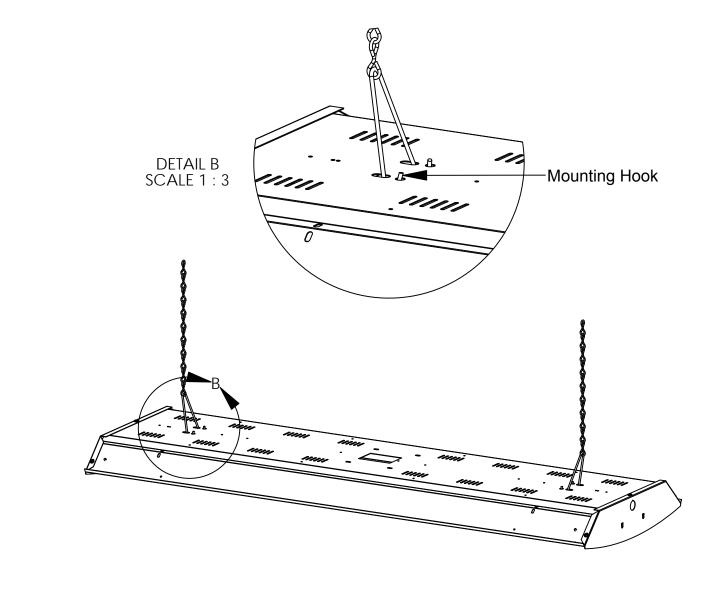

- Squeeze the provided mounting hook and insert in to the oblongs on the fixture as shown.
- <PARA >Rotate the mounting hook so that the ends slip out of the adjacent holes.
- Repeat on the opposite end of the fixture. The mounting hooks should face inward on the fixture.





Flat Tip Screwdriver

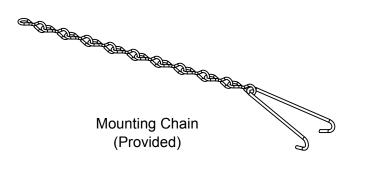

Step 2 - Connect Power Cord

A. Retrieve The Wiring

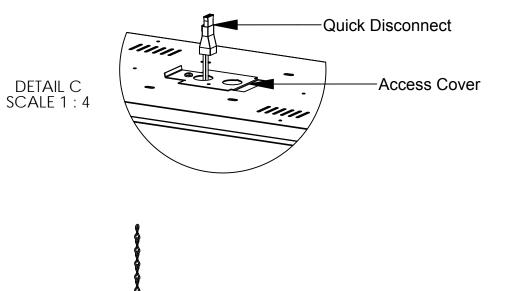

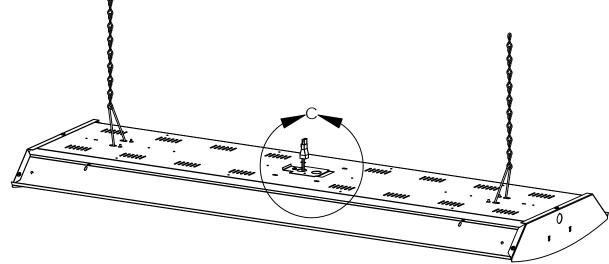

- Bring the fixture wiring thru the 7/8" knockout previously removed.
- Install the access cover and secure with the 8-32 x .25" screw.







WIRING LEGEND		
Black	Hot	Line Voltage
White	Neutral	Line Voltage
Green	Ground	
Gray	Dimming	0-10V DC
Violet	Dimming	0-10V DC

- Connect the incoming supply to the power cord by following all local, state and national codes.
- Install is now complete.