INSTALLATION INSTRUCTIONS FOR THE 4RB, 8RB - X1 SERIES RETROFIT KIT

APPLICATION: General/Perimeter Lighting






Strip fixture with T8 bulbs and ballast


- 1- Turn off power
- 2- Remove ballast/wireway cover from existing strip fixture





- 3- Remove lampholders and socket bars from existing strip housing
- 4- Remove ballast



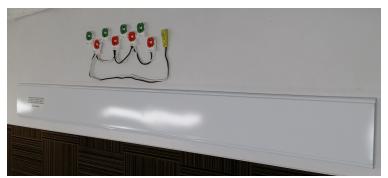




5- Install red sockets to one end of the fixture.



6- Install green sockets to the opposite end of the fixture.







- 8- Install the new cover to the pan.
- 9- With the power still disconnected, install the LED lamps to the fixture. Then test the fixture.