


# SBC Vinyl Cover Installation Instructions

## Step 1 - Install The Vinyl Cover




Texas Fluorescents Reinvented

### A. Insert First Corner of Vinyl

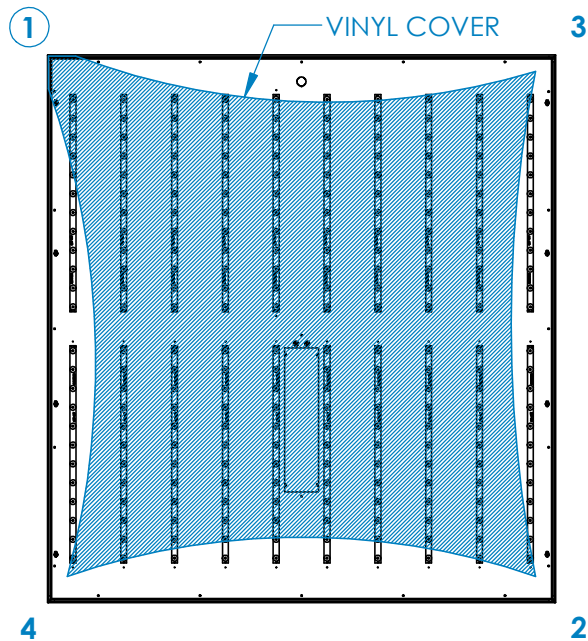

- Insert the vinyl cover into corner 1 shown in the above diagram by tucking the cover edge into the small gap along the edge of the fixture.
- Insert approximately 3-6" of the cover in both directions going away from the corner.

### B. Insert Second Corner of Vinyl

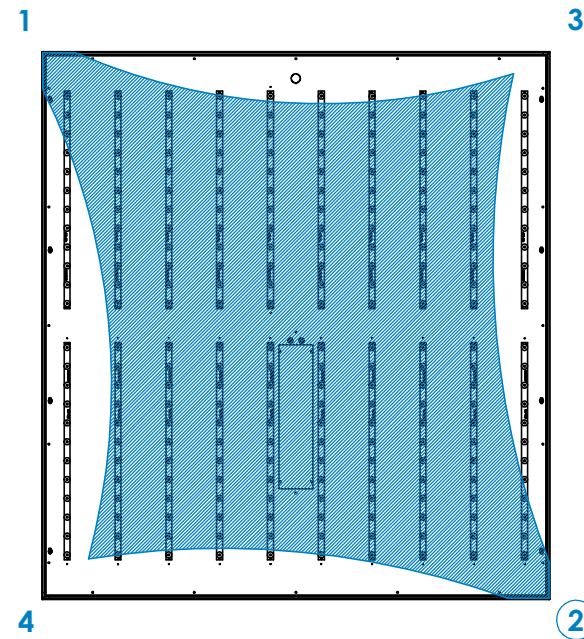

- Insert the vinyl cover into corner 2 as shown in the above diagram by tucking the cover edge into the small gap along the edge of the fixture.
- Insert approximately 3-6" of the cover in both directions going away from the corner.
- Repeat these steps for corners 3 and 4 before continuing to the next page


# SBC Vinyl Cover Installation Instructions

## Step 1 - Install The Vinyl Cover (Cont'd)




Texas Fluorescents Reinvented

### A. Install Sections A Thru D of Vinyl Cover

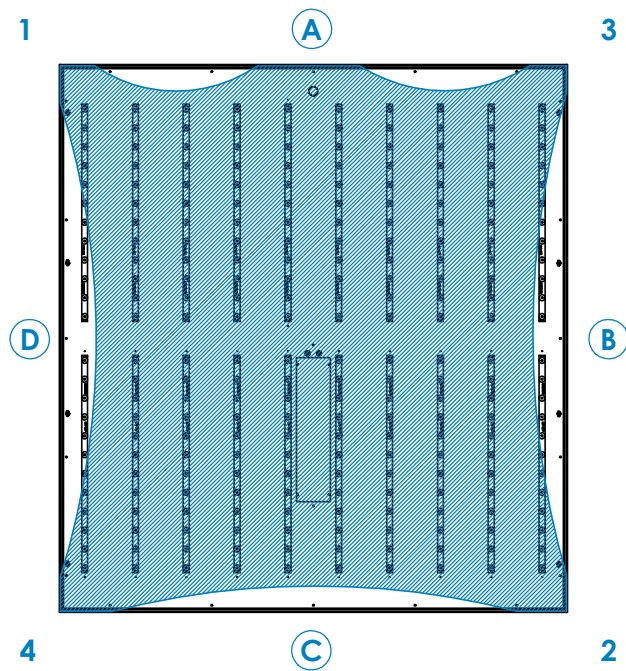

- Insert section A of the vinyl cover into the shadowbox frame by tucking the cover edge into the small gap along the edge of the fixture.
- Repeat in a clockwise fashion, continuing to sections B through D.

### B. Install Remaining Sections of Vinyl Cover

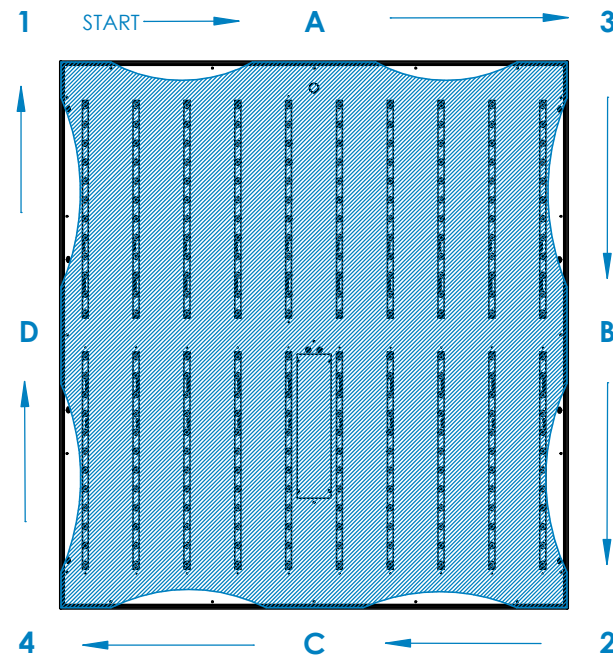

- Starting at the remaining untucked section between corner 1 and section A, insert the vinyl cover into the shadowbox frame.
- Repeat in a clockwise fashion, following the arrows in the above diagram until the vinyl cover is fully installed.
- Fixture installation is now complete.