

Commercial Remodeler Kit Installation Instructions

STEP 1

Insert recessed pan into the ceiling open and rotate pan into position as note in Figure A and Figure B.

STEP 2

Secure recessed pan to ceiling using fasteners (Drill Screws) or held in position with the remodeler clips supplied from the factory.

STEP 3

Run electricity to Vantage remodeler junction box. Then attach Vantage light engine power lead to remodeler junction box.

STEP 4

Insert light engine through existing hole in the ceiling

STEP 5


Attach reflector with screws through key slots in the reflector to the light engine housing.

STEP 6

Install reflector into recessed pan (pan prefitted with friction clips).

STEP 7

Energize

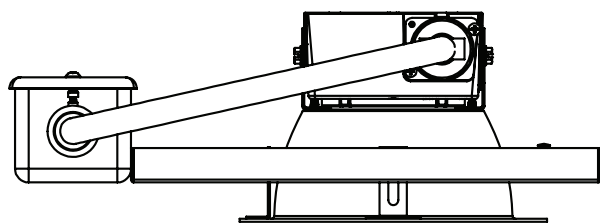

Cut 2 1/2" Out

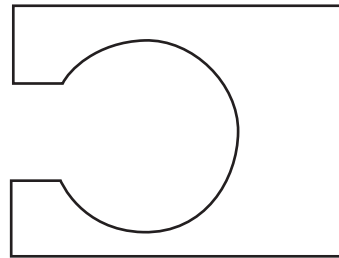


Figure A


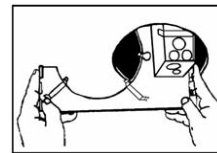


Figure B



COMMERCIAL REMODELER

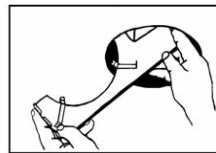

COMMERCIAL REMODELER KIT CONTENTS

